



**PCX422HR, PCX422e**

**PCX442HR, PCX442e**

**PCX440HR, PCX440e**

*Professional Multichannel Sound Cards*



*User manual*

**For technical support,  
please contact your system supplier.**



**Digigram S.A.**

82/84 Allée Galilée, 38330 Montbonnot-Saint-Martin, FRANCE  
Tel: +33 (0)4 76 52 47 47 • Fax: +33 (0) 4 76 52 18 44 • E-mail: [info@digigram.com](mailto:info@digigram.com)

**Digigram Inc.**

2000 North 14th Street - Suite 530, Arlington, VA 22201-USA  
Tel: +1 703 875 9100 • Fax: +1 703 875 9161 • E-mail: [input@digigram.com](mailto:input@digigram.com)

**Digigram Asia Pte Ltd.**

60 Albert Street - #19-110G Albert Complex Singapore 189969, Singapore  
Tel : +65 6291 2234 • Fax : +65 6291 3433 • E-mail : [info\\_asia@digigram.com](mailto:info_asia@digigram.com)

# Table of Contents

<b>INFORMATION FOR THE USER</b> .....	4
<b>IMPORTANT NOTICE</b> .....	5
<b>CONTENTS OF THIS PACKAGE</b> .....	5
<b>FEATURES</b> .....	5
PCX422HR and PCX422e main hardware features.....	6
PCX442HR and PCX442e main hardware features.....	6
PCX440HR and PCX440e main hardware features.....	6
Main software features.....	7
<b>REQUIREMENTS</b> .....	7
Minimum hardware requirements.....	7
Software requirements.....	8
Supported operating systems.....	8
<b>HARDWARE INSTALLATION</b> .....	8
Installing the card.....	8
Interrupt and memory address.....	8
<b>SOFTWARE INSTALLATION</b> .....	9
Standard installation under Windows XP, Server 2003, Vista, Server 2008, and Windows 7.....	9
Parameterizing the ASIO driver.....	10
Parameterizing the Wave driver.....	11
Removing the driver under Windows XP and Windows Server 2003.....	12
Removing the driver under Windows Vista, Server 2008, and Windows 7.....	12
<b>HOW TO CHECK THE INSTALLATION</b> .....	12
<b>THE 'DIGIGRAM HARDWARE SETTINGS' ('DHS')</b>	
<b>CONTROL PANEL</b> .....	14
<b>SPECIFICATIONS</b> .....	15
Configuration.....	15
Inputs.....	15
Outputs.....	16
Connectors.....	16
Audio specifications.....	16
Audio performance.....	17
Development environments.....	17
<b>APPENDICES</b> .....	18
PCX422HR/e and PCX442HR/e schematic diagram.....	18
PCX440HR/e schematic diagram.....	18
Layout.....	19
Cable diagram.....	20
Wiring diagram.....	21
Adapter cable Sub-D 62 ↔ SCSI 68 MDR.....	22
Connection cable PCX442e/PCX422e/PCX440 ↔ BoB8.....	22
Sub-D 62 ↔ SCSI 68 MDR wiring diagram.....	23
PCX442HR, PCX422HR, and PCX440HR cable pinout.....	24
PCX442e, PCX422e, and PCX440e cable pinout.....	24

## INFORMATION FOR THE USER

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions contained in this data sheet, may cause harmful interference to radio and television communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* reorient or relocate the receiving antenna
- \* increase the separation between the equipment and the receiver
- \* connect the equipment into an outlet on a circuit different from that of the receiver
- \* consult the dealer or an experienced audio television technician.

**Note:** *Connecting this device to peripheral devices that do not comply with CLASS B requirements or using an unshielded peripheral data cable could also result in harmful interference to radio or television reception. The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. To ensure that the use of this product does not contribute to interference, it is necessary to use shielded I/O cables.*

### **Warning:**

*Electrostatic discharge (ESD) can damage several components on the board. To avoid such damage in handling the board, take the following precautions:*

*Bring the device and everything that contacts it to ground potential by providing a conductive surface and discharge paths. As a minimum, observe these precautions:*

- *Disconnect all power and signal sources.*
- *Place the device on a grounded conductive work surface.*
- *Ground yourself via a grounding wrist strap or by holding a grounded object.*
- *Ground any tool that will contact the device.*



**Due to the reduced length of the PCI EXPRESS™ bus connector and the resulting lack of mechanical stability, we strongly advise against transporting the PCIe® card(s) installed in a computer, unless its chassis or case provides a dedicated support to keep the card securely in place in order to avoid physical damage.**

## **IMPORTANT NOTICE**

---

This card has been tested and found to comply with the following standards:

- International: CISPR22 Class B
- Europe: EMC 89/336/CEE (1992) specifications
- United States: FCC Rules-Part 15-Class B (digital device)

In order to guarantee compliance with the above standards in an installation, the following must be done:

- the provided cable must not be modified
- additional cables used must have their respective shield connected to each extremity

## **CONTENTS OF THIS PACKAGE**

---

Thank you for purchasing a Digigram PCX sound card.

The package consists of the following components:

- a PCX442HR, PCX442e, PCX422HR, PCX422e, PCX440HR or PCX440e sound card

The cables are not part of this package. They are delivered separately.

### **Also available (optional):**

2U 19-inch breakout box allowing straightforward and secure connection to all the cards' I/Os.

## **FEATURES**

---

PCX442HR, PCX422HR, and PCX440HR are audio cards for PCI bus. They are 'Universal PCI 64-bit/66 MHz' (PCI 2.2), which means they can be plugged in 32-bit/33 MHz 5 V PCI slots as well as in 64-bit/66 MHz 3.3 V keyed PCI slots. The cards are also compatible with PCI-X interfaces.

PCX442e, PCX422e, and PCX440e are audio cards for PCI EXPRESS™ (PCIe®) bus. They are in PCI EXPRESS™ x1 format and can thus be plugged into any PCIe® slot (x1, x2, x4, x8, x16, x32).

## **PCX422HR and PCX422e main hardware features**

- 2 balanced\* analog mono line inputs, with software programmable analog and digital gain
- 4 servo-balanced\*\* analog mono line outputs, with software programmable analog and digital gain
- 192 kHz / 24-bit converters
- Maximum level on analog inputs and outputs: +24 dBu
- 1 AES/EBU\*\*\* stereo input, with hardware sample rate converters (up to 96 kHz on PCX422HR, up to 192 kHz on PCX422e)
- 1 AES/EBU\*\*\* stereo output (up to 192 kHz)
- 1 AES/EBU\*\*\* stereo sync input (up to 192 kHz in play and record)
- 1 standard Word Clock input (up to 96 kHz)
- 1 standard Word Clock output (up to 96 kHz)
- 1 video sync input
- 1 SMPTE/LTC (Linear Time Code) sync input

## **PCX442HR and PCX442e main hardware features**

All features of the PCX422HR and PCX422e, plus:

- 2 balanced\* analog mono line inputs, with software programmable analog and digital gain (the cards thus providing a total of 4 mono inputs)
- 1 AES/EBU\*\*\* stereo input (up to 192 kHz)  
(the cards thus providing a total of 2 AES/EBU inputs)

## **PCX440HR and PCX440e main hardware features**

- 4 balanced\* analog mono line inputs, with software programmable analog and digital gain
- 4 servo-balanced\*\* analog mono line outputs, with software programmable analog and digital gain
- 192 kHz / 24-bit converters
- Maximum level on analog inputs and outputs: +24 dBu
- 1 AES/EBU\*\*\* stereo sync input (up to 192 kHz in play and record)
- 1 standard Word Clock input (up to 96 kHz)
- 1 standard Word Clock output (up to 96 kHz)
- 1 video sync input
- 1 SMPTE/LTC (Linear Time Code) input

---

\* can be used with unbalanced signals

\*\* electronically servo-balanced outputs provide automatic level adjustment to accommodate either balanced or unbalanced lines

\*\*\* can be used as S/PDIF interface as well

## **Main software features**

- Real-time, simultaneous record and playback in PCM (8, 16 and 24 bits) as well as in MPEG Audio Layer I, Layer II and Layer III<sup>Ⓞ</sup>, Float IEEE754 conversion supported (with 24-bit fixed-point dynamic range)
- When using the np SDK, real-time mixing of several PCM and MPEG audio streams, direct monitoring, level adjustment, panning, cross-fades, punch-in/punch-out, scrubbing, time-stretching, pitch-shifting, 3-band parametric equalizer, maximizer, format and frequency conversions
- Low latency DirectSound, Wave<sup>\*\*\*\*</sup>, and ASIO drivers. Under DirectSound and ASIO, the cards operate in PCM mode only (nevertheless, an application can integrate coders/decoders on the host PC). Under Wave, HR boards can operate in both PCM and MPEG (layer 1 and layer 2).
  - Ⓞ *MPEG Layer III play-only on DSP;*  
*MPEG Layer III recording on the host computer is available through Digigram's PC Codec using the np SDK*

## **REQUIREMENTS**

---

### **Minimum hardware requirements**

**PCX442HR, PCX422HR, and PCX440HR:**

PC with one free PCI or PCI-X slot (5 V or 3.3 V).

**PCX442e, PCX422e, and PCX440e:**

PCI EXPRESS™ (PCIe®) slot (x1, x2, x4, x8, x16 or x32).

CPU power and memory required depend on the operating system and on the audio application used.

---

<sup>\*\*\*\*</sup> Windows XP and Server 2003 only; for Windows Vista, a Wave driver is available on request.

## Software requirements

To use your PCX HR or PCX e card, install the driver from the HR Runtime package version 1.72 or higher. This package includes:

- a Digigram np driver enabling OEM applications to best capitalize on the boards
- a WDM DirectSound driver
- a Wave driver\* (32 bits, installation optional)
- an ASIO driver (32 bits, installation optional)

**Note:** *the HR Runtime package for Windows Vista does not include a Wave driver. In case your audio application explicitly requires a Wave interface, a Wave driver is available on request. In this case, please contact [Digigram](#).*

## Supported operating systems

PCX HR and PCX e cards run under Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, and Windows 7.

## HARDWARE INSTALLATION

---

*Due to the reduced length of the PCI EXPRESS™ bus connector and the resulting lack of mechanical stability, we strongly advise against transporting the PCIe® card(s) installed in a computer, unless its chassis or case provides a dedicated support to keep the card securely in place in order to avoid physical damage.*

The card has to be installed in the computer prior to installing its driver.

### Installing the card

Gently plug the card in a free PCI slot and press it down to position it firmly. Tighten the screw.

### Interrupt and memory address

Hardware interrupt and addresses are automatically set up at start-up by the PCI PnP BIOS.

---

\* Windows XP and Server 2003 only



## **SOFTWARE INSTALLATION**

---

**Note:** *the installation of the software requires administrator rights on your computer*

Please visit the Digigram web site at **www.digigram.com** for the most recent driver.

In case you run a specific application developed or installed by a Digigram Partner, this application might require the use of a specific driver version. In this case, make sure that the updated driver has been approved by your supplier.

### **Standard installation under Windows XP, Server 2003, Vista, Server 2008, and Windows 7**

If the driver has been downloaded from our web site, it has to be expanded prior to the driver's installation as follows: double-click on the downloaded file (self-expanding). You can use the default destination location (Windows temporary folder) or select another directory.

***Important note:*** *this default procedure installs the 'Digigram Hardware Settings' control panel. This application allows the configuration of the hardware resources of Digigram cards for all audio applications. The DHS allows for instance to define the clock of the card, the input source, input and output analog and digital gain, Sample Rate Converters, digital output format, etc...*

*Please note that, with the DHS installed, controls available through the DirectSound control panel are limited to:*

- *Volume control for input and output*
- *Wave control*

*Under Windows XP and Server 2003 you may also install the driver without installing the DHS control panel, and in this case more controls are available through the DirectSound control panel:*

- *Volume control for input*
- *Wave control*
- *Monitoring control*
- *Analog input level*
- *Digital input level*
- *Clock selection: AES Sync, AES I, Word Clock*
- *Digital output format: professional, consumer*

*To do so, install the driver with the command line: "**setup x\_topology**" (not available under Windows Vista). For detailed information, please refer to the dedicated document on our web site.*

- Shut down your computer and insert your PCX card.
  - Restart your computer.
  - Click on Cancel if the **Found New Hardware** Wizard appears.
  - Double-click on the **HR Runtime vxx.msi/HR Runtime vxx.msi for Vista** icon to launch the driver installation.
  - A welcome message is displayed, click **Next** to continue.
  - The “**License Agreement**” window appears: read it, and click on “**I accept the terms in the license agreement**” to approve it and ASIO HR are .
  - Do the same in the next window for Virtual PCX and PC Codec Legal Notice.
  - In the “**Custom Setup**” window, the “*Drivers for the HR boards*” are displayed; by default, both WDM DirectSo installed. To install the Wave driver\*, select ‘**Wave**’.
- Next.**

- In the “Ready to Install the Program Window”, click on Install to start copying the files.
  - **Note:** In case you use an unsigned driver version, the “Digital Signature Not Found” message may appear because a non-Microsoft software is about to be installed. Click on **Continue** in the “**Hardware installation**” window (Windows XP, Server 2003).
- Under Windows Vista:  
Click **Allow** in the “**User Account Control**” window.  
Click **Install** in the “**Windows Security**” window.
- In the “**Digigram drivers**” window, select the number and the size of buffers required by your applications. Click on **Ok**.
- Click **Finish** to complete the driver installation.

## Parameterizing the ASIO driver

**Note:** for most current ASIO applications (e.g. Cubase, Nuendo, etc...) you generally have the choice between a 32-bit and a 64-bit version at installation (64 bits under Windows ≥ Vista.) For your PCX card, please use the 32-bit version!

To use the ASIO driver on your PCX sound card, the option “**PCM only**” has to be activated in the Digigram control panel (CPL). To access this control panel, go to <Start>, <Programs>, <Digigram>, <Digigram Control Center>.

For detailed information on how to use the Digigram control panel, please refer to its online help (“? **Help**” button).

---

\* Windows XP and Server 2003 only; for Windows Vista, a Wave driver is available on request.


# PCX442HR, PCX442e, PCX422HR, PCX422e, PCX440HR, PCX440e User Manual

To launch the ASIO control panel, go to <Start>, <Programs>, <Digigram>, <Digigram ASIO HE Settings>.

It allows to:

- set/modify the size of ASIO buffers (and thus latency)
- select the number of bits per sample (16 or 24)
- select the LTC frame rate
- select the I/O used
- enable/disable the hardware monitoring control

For more information on this ASIO control panel, to refer to its online help.

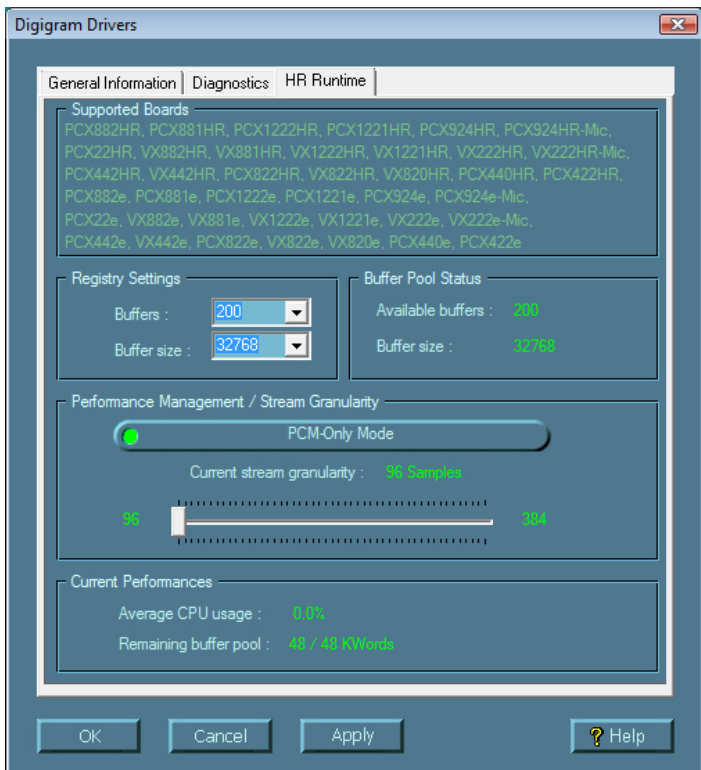

## Parameterizing the Wave driver

In the case of an application managing exclusively PCM audio, the latency of the Wave driver can be optimized activating the option “PCM only” in the Digigram control panel (CPL). With this option enabled, the latency of the Wave driver is optimized (in this case the PCX HR on-board MPEG

encoding/decoding is disabled). To access this control panel, go to <Start>, <Programs>, <Digigram>, <Digigram Control Center>. For detailed information on how to use the Digigram control panel, please refer to its online help (“? Help” button).

## Removing the driver under Windows XP and Windows Server 2003

- Open the **Windows Control Panel** and double-click on the **Add/Remove Software** icon.
- Select “*Digigram HR Runtime ...*”, and **Change/Remove**.
- Select **Remove** in the HR Runtime window.
- Follow the instructions to finish to remove the driver.

## Removing the driver under , Windows Vista, Windows Server 2008, and Windows 7

- Open the **Windows Control Panel** and double-click on the **Programs and Features** icon.
- Select “*Digigram HR Runtime for Vista...*”, and **Change/Remove**.
- Select **Remove** in the HR Runtime window.
- Follow the instructions to finish removing the driver.

## How to check the installation

---

Once the cards and the driver have been installed according to the procedure described in this manual, you can verify that the card is properly installed and works fine as follows:

- Menu <Start> <Settings> <Control panel>, <Sound and Multimedia>, tab “Audio”, **Default device** (Playback device, Recording device). The card’s channels can be selected. The card can be used with any *DirectSound* application.  
Available WDM devices are:
  - PCX442HR/e (PCX422HR/e, PCX440HR/e) 1+2 (WDM)  
(*record and playback*)
  - PCX442HR/e (PCX440HR/e) 3+4 (WDM)  
(*record and playback*)
  - PCX422HR/e 3+4 (WDM) (*playback only*)
- The card is also visible via the np interface: go to <Start> <Programs> <Digigram> and select <Digigram Control Center>.

- In the “**Digigram drivers**” window, select the ‘**General Information**’ tab. In the “**Modules Information**” window, you can see the **HR Runtime** modules that have been installed, and their versions.
- In the “**Digigram drivers**” window, select the ‘**Diagnostics**’ tab. You should see here the icons of the cards you have installed.
- If the card you have installed is listed:
  - Right click on the icon of the card.
  - Select ‘**Diagnostics**’, and **Play Sine**. This plays in loop a sine signal on the outputs of the card. You can also select **Play file** to play in loop a file of your choice (PCM only).  
If the playback is correct, the card is correctly installed and works.
  - To stop the playback, right click on the card icon, and select **Stop Activities**.
  - If the card is not displayed:
  - Make sure that during the HR runtime installation the “**Driver for the HR boards**” has been selected in the “**Select components**” window.
  - Make sure that the card is correctly inserted in the PCI slot, and screwed on the PC chassis.
  - If necessary, uninstall the HR runtime package as described in this manual, and re-install it.
- If the Wave driver has been installed\*:
  - Go to menu <**Start**>, <**Settings**>, <**Control panel**>, <**Sound and Multimedia**>, tab “**Audio**”, **Default device (Playback device, Recording device)**. The card’s channels can be selected. The card can be used with any Wave application.  
Available Wave recording and playback devices are:
    - PCX442HR/e (PCX422HR/e, PCX440HR/e) 1+2 (Wave)  
(record and playback)
    - PCX442HR/e (PCX440HR/e) 3+4 (Wave)  
(record and playback)
    - PCX422HR/e 3+4 (Wave) (playback only)
- If the ASIO driver has been installed:
  - The card is visible from any ASIO application.

---

\* Windows XP and Server 2003 only; for Vista, a Wave driver is available on request.

## The ‘Digigram Hardware Settings’ (‘DHS’) control panel

---

Digigram Hardware Settings (DHS) is an application allowing to configure the hardware resources of Digigram cards for all audio applications using them. A resource being managed by the DHS application can not be modified by any other applications. To enable an audio application to modify a Digigram card resource, this resource must not be managed by the DHS.

**Note:** *As soon as a resource of a card is managed by the DHS, the clock selection of this card MUST be defined in the DHS.*

The DHS allows to:

- Select the clock the card uses
- Select the input source
- Adjust analog and digital gains of inputs and outputs
- Enable Sample Rate Converters of an input
- Select the input monitored on an output
- Set the monitoring gains
- Define the digital output format

*For more detailed information on how to use this control panel, please refer to its on-line help.*

## SPECIFICATIONS

### Configuration

	PCX442HR PCX422HR PCX440HR	PCX442e PCX422e PCX440e
Bus/Format	64-bit/66 Mhz Universal PCI 2.2, PCI-X compatible, master mode	PCI Express™ (PCIe®) x1 (x2, x4, x8, x16, x32 compatible)
Digital Signal Processor	Motorola 56321 at 240 MHz	
RAM	512 kWords	
Size	175 mm × 99 mm × 20 mm	168 mm × 111 mm × 20 mm
Power requirements (+3.3V/+5V / +12V / -12V)	0 A / 0.7 A / 0.5 A / 0.2 A	2.5 A / 0 A / 0.1 A / 0 A
Operating: temp / humidity (non-condensing)	0°C/+50°C • 5%/90%	
Storage: temp / humidity (non-condensing)	-5°C/+70°C • 0%/95%	

### Inputs

	PCX442HR PCX422HR PCX440HR	PCX442e PCX422e PCX440e
Analog line inputs (mono)	4 balanced* on PCX44x 2 balanced* on PCX42x	
Maximum input level/ impedance	+24 dBu/ >10 kΩ	
AES/EBU** inputs (stereo) (not available on PCX440HR/e)	1 on PCX42xHR/e 2 on PCX442HR/e with switchable hw sample rate converters ratio 1:3 to 3:1, up to 96 kHz	1 on PCX42xHR/e 2 on PCX442HR/e with switchable hw sample rate converters, ratio from 1:8 to 7.5:1, up to 192 kHz
Programmable input gain	analog: from -94.5dB à +15.5 dB <sup>⊗</sup> digital: from -110 dB à +18 dB	
Other inputs	AES/EBU Sync (up to 192 kHz), Word clock (up to 96 kHz), LTC, Video	
AES11 synchronization	Yes	

\* can be used with unbalanced signals

\*\* can be used as S/PDIF interface as well

⊗ maximum sensitivity: 0 dBFS for -15.5 dBu input

## Outputs

	PCX442HR PCX422HR PCX440HR	PCX442e PCX422e PCX440e
Analog line outputs (mono)	4 servo-balanced*	
Maximum output level / impedance	+24 dBu / <100 Ω	
Digital outputs (stereo) (not available on PCX440HR/e)	2 AES/EBU**, up to 192 kHz	
Programmable output gain	analog: from -86 dB to +24 dB digital: from -110 dB to +18 dB	
Other output	Word clock (up to 96 kHz)	

## Connectors

	PCX442HR PCX422HR PCX440HR	PCX442e PCX422e PCX440e
Internal connectors	Inter-board Sync	
External connector	62-pin HD Sub-D	68-pin SCSI MDR
Digigram accessories available	Breakout cable or 2U 19" Breakout Box	

## Audio specifications

	PCX442HR PCX422HR PCX440HR	PCX442e PCX422e PCX440e
Sampling frequencies available	Programmable from 32 to 192 kHz	
A/D and D/A converter resolution	24 bits	
Supported audio formats	MPEG, PCM (8, 16, 24 bits), Float IEEE754	

\* electronically servo-balanced outputs provide automatic level adjustment to accommodate either balanced or unbalanced lines

\*\* can be used as S/PDIF interface as well



## Audio performance

Measurements done at  $F_s=48$  kHz unless stated otherwise, with filter on the 22 Hz - 22 kHz range

	PCX442HR PCX422HR PCX440HR	PCX442e PCX422e PCX440e
Frequency response (record + play)	20 Hz–20 kHz: $\pm 0.2$ dB	
Channel phase difference: 20/20kHz	$< 0.2^\circ/2^\circ$	
Dynamic range (A-weighted)	Analog In: $> 104$ dBA Analog Out: $> 104$ dBA	
THD + noise 1 kHz at $-1$ dBfs	Analog In: $< -97$ dB Analog Out: $< -94$ dB	
THD + N 1 kHz AES/EBU In w/ SRC	$< -110$ dB	$< -130$ dB
Crosstalk (Analog in or out)	1 kHz at 24 dBu: $< -100$ dB 15 kHz at 24 dBu: $< -85$ dB	


## Development environments

	PCX442HR PCX422HR PCX440HR	PCX442e PCX422e PCX440e
Digigram management	np SDK (HR Runtime, PCM & MPEG)	
Other management	Wave* (PCM & MPEG Layer I & II), ASIO, and DirectSound (PCM)	
OS supported	Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, and Windows 7	
Main on-board processing features (with np SDK)	PCM play & rec, MPEG Layers I & II play & rec, Layer III play, Float IEEE754, direct monitoring, real-time mixing, level adjustment, panning, cross-fade, punch-in/punch-out, scrubbing, time-stretching, pitch-shifting, 3-band parametric equalizer, maximizer, format and frequency conversions	


\* Windows XP and Server 2003 only; for Windows Vista, a Wave driver is available on request.

## APPENDICES



### PCX422HR/e and PCX442HR/e schematic diagram

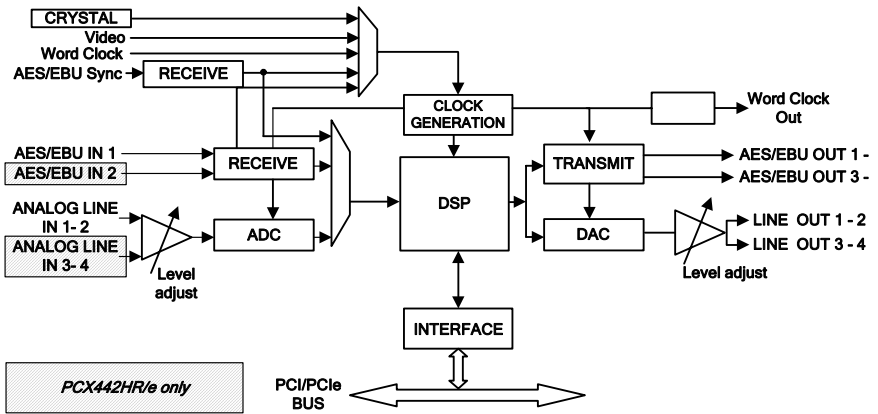

### PCX440HR/e schematic diagram

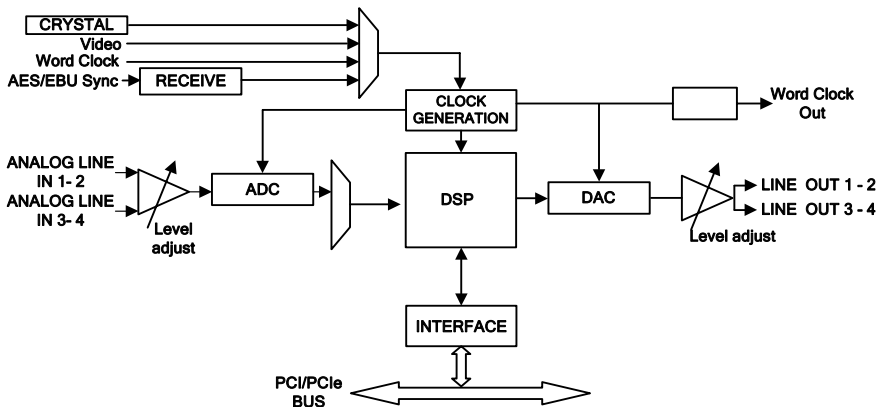

## Layout

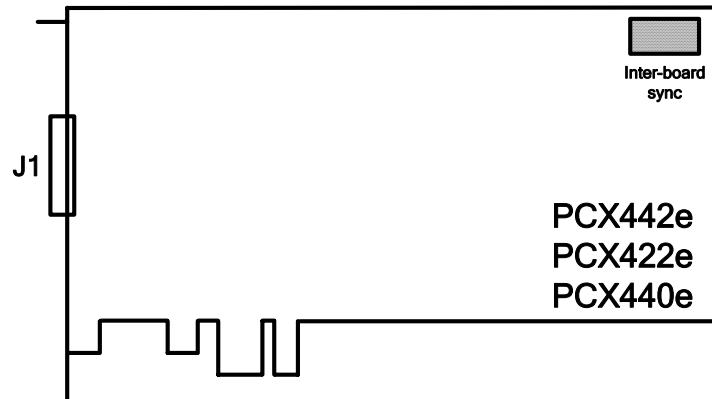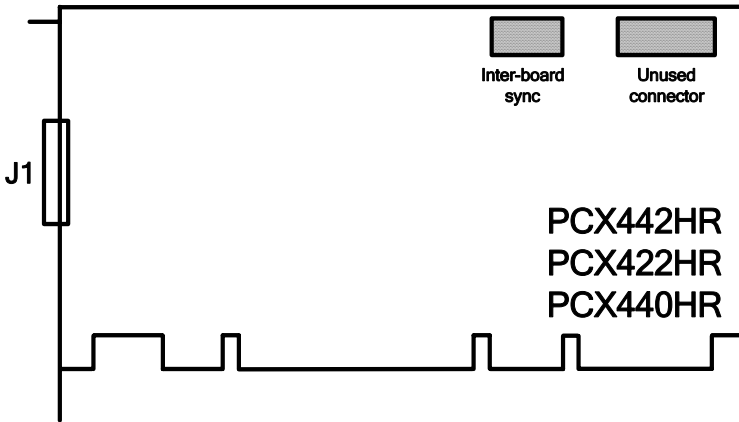


J1:

- 62-pin HD Sub-D I/O connector (PCX442HR, PCX422HR, and PCX440HR)
- 68-pin SCSI MDR I/O connector (PCX442e, PCX422e, and PCX440e)


## Cable diagram

Schematic diagram of the cable delivered by Digigram\*:

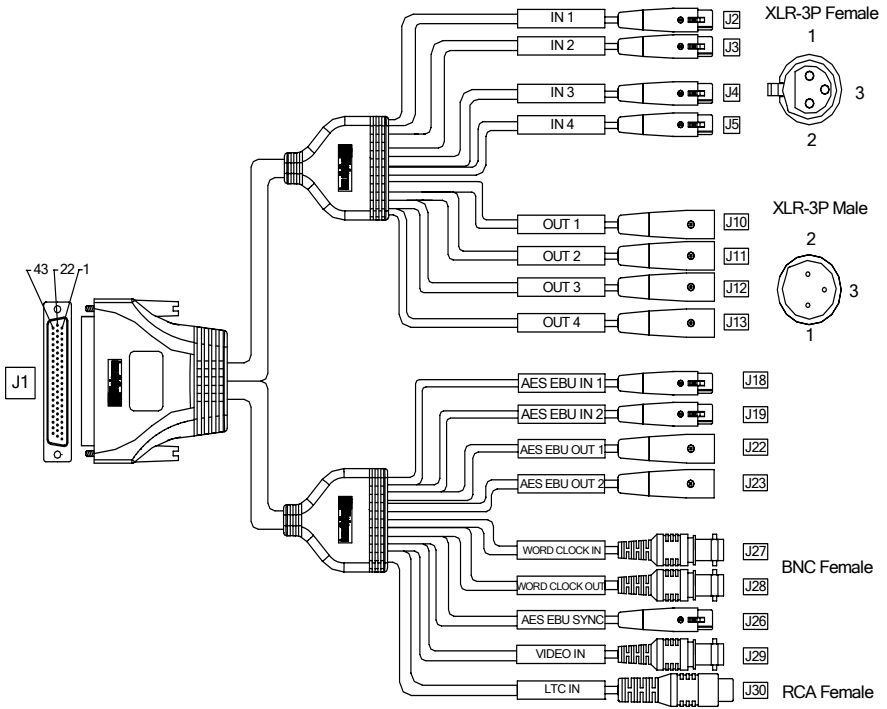


\* Your cable may look different if it is not a Digigram cable.

Wiring diagram

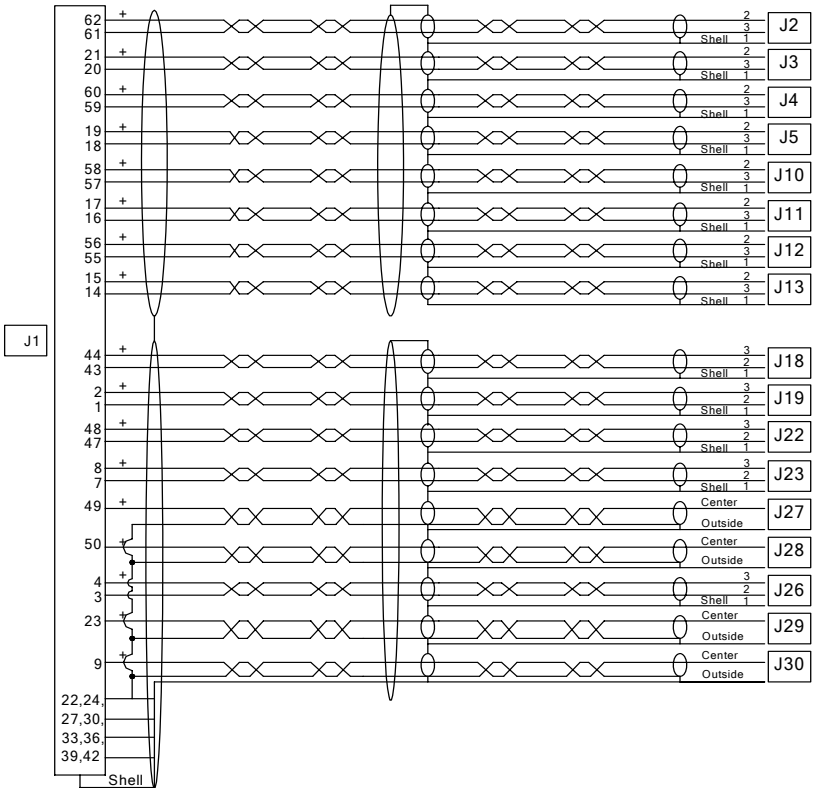


## Adapter cable Sub-D 62 ↔ SCSI 68 MDR

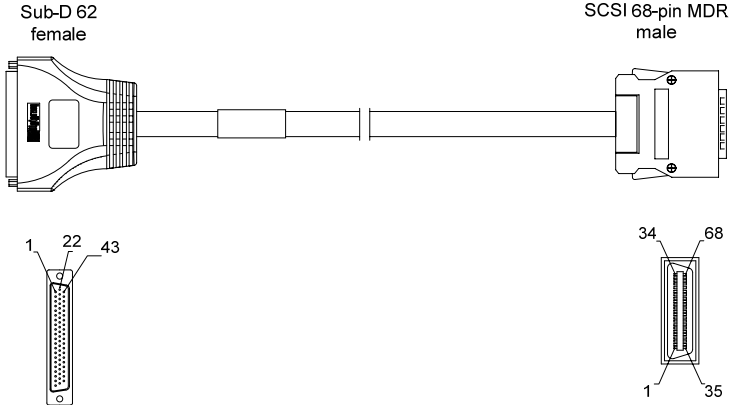


If your card is a PCX4xxe, i.e. has a PCI EXPRESS™ (PCIe®) bus, use this adapter cable to connect the audio I/O cable with the card.

## Connection cable PCX442e/PCX422e/PCX440 ↔ BoB8

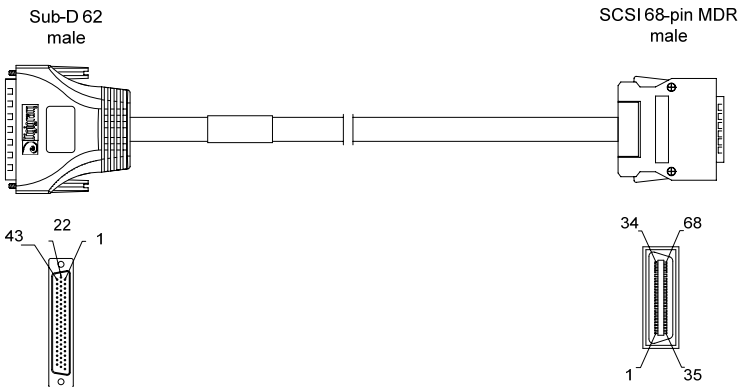

Sub-D 62 ↔ SCSI 68 MDR wiring diagram

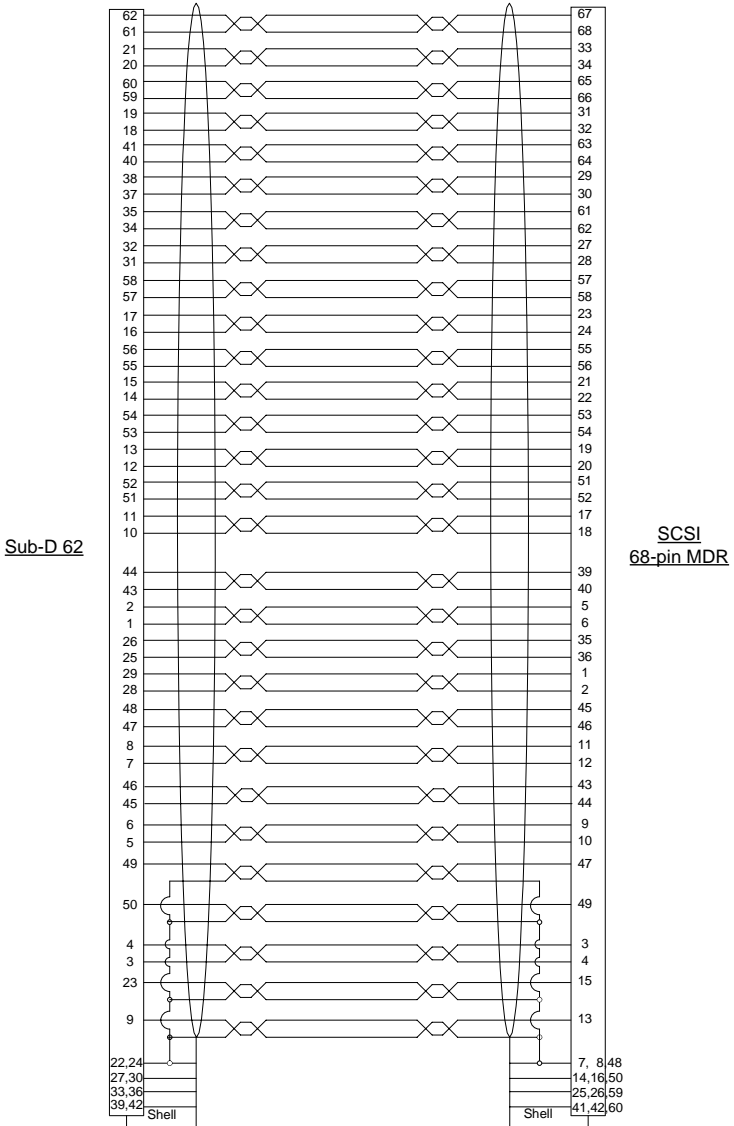

## PCX442HR, PCX422HR, and PCX440HR cable pinout

	Pin	Signal	Pin	Signal	Pin	Signal
Digital	1	AES/EBU IN 2 -	22	GND	43	AES/EBU IN 1 -
	2	AES/EBU IN 2 +	23	Video IN	44	AES/EBU IN 1 +
	3	AES/EBU SYNC -	24	GND	45	
	4	AES/EBU SYNC +	25		46	
	5		26		47	AES/EBU OUT 1 -
	6		27	GND	48	AES/EBU OUT 1 +
	7	AES/EBU OUT 2 -	28		49	Word Clock IN
	8	AES/EBU OUT 2 +	29		50	Word Clock OUT
Analog	9	LTC IN	30	GND	51	
	10		31		52	
	11		32		53	
	12		33	GND	54	
	13		34		55	OUT 3 -
	14	OUT 4 -	35		56	OUT 3 +
	15	OUT 4 +	36	GND	57	OUT 1 -
	16	OUT 2 -	37		58	OUT 1 +
	17	OUT 2 +	38		59	IN 3 -
	18	IN 4 -	39	GND	60	IN 3 +
	19	IN 4 +	40		61	IN 1 -
	20	IN 2 -	41		62	IN 1 +
	21	IN 2 +	42	GND		

## PCX442e, PCX422e, and PCX440e cable pinout

	Pin	Signal	Pin	Signal	Pin	Signal
Digital	1		11	AES/EBU OUT 2 +	41	GND
	2		12	AES/EBU OUT 2 -	42	GND
	3	AES/EBU SYNC +	15	Video IN	43	
	4	AES/EBU SYNC -	16	GND	44	
	5	AES/EBU IN 2 +	35		45	AES/EBU OUT 1 +
	6	AES/EBU IN 2 -	36		46	AES/EBU OUT 1 -
	7	GND	37	Reserved	47	Word Clock IN
	8	GND	38	Reserved	48	GND
	9		39	AES/EBU IN 1 +	49	Word Clock OUT
	10		40	AES/EBU IN 1 -	50	GND
Analog	13	LTC IN	28		57	OUT 1 +
	14	GND	29		58	OUT 1 -
	17		30		59	GND
	18		31	IN 4 +	60	GND
	19		32	IN 4 -	61	
	20		33	IN 2 +	62	
	21	OUT 4 +	34	IN 2 -	63	
	22	OUT 4 -	51		64	
	23	OUT 2 +	52		65	IN 3 +
	24	OUT 2 -	53		66	IN 3 -
25	GND	54		67	IN 1 +	
26	GND	55	OUT 3 +	68	IN 1 -	
27		56	OUT 3 -			